

IMPORTANT!



You will need USB Emily to install the "Disable Stimulation on Level 18" on your Chameleon® or micro collar in order to use "Option P" as a Delete Kick! To reinstall the electricity after using "Option P", you must use Emily because after setting install the "Disable Stimulation on Level 18" on your Chameleon® or micro collar, a Finger-Kick paired to Option "P" will delete all electricity!

IMPORTANT!



You will need USB Emily to install the "Disable Stimulation on Level 18" on your Chameleon® or micro collar in order to use "Option P" as a Delete Kick! To reinstall the electricity after using "Option P", you must use Emily because after setting install the "Disable Stimulation on Level 18" on your Chameleon® or micro collar, a Finger-Kick paired to Option "P" will delete all electricity!